

DMD
COLLECTIVE

DMD120

Electric Heated Foot Warmer

Read all these instructions carefully and save them before use. We reserve the right to make technical and optical changes without prior notice. The use of attachments or accessories that are not supplied with the appliance is not recommended. This could result in an electrical shock, injury, or permanent damage to the appliance. This product is for household use only. When using any electrical appliance, basic precautions should be followed.

Health & Safety Guidelines

- Always unplug the unit when not in use, before cleaning, or when adding or removing parts. Please read the instructions carefully before using any appliance.
- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The appliance is intended for household use only. Commercial use invalidates the warranty, and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
- Close supervision is necessary when this appliance is used by children.
- Check the power cord and plug regularly for any damage. If the cord or the plug is damaged, it must be replaced by the manufacturer or a qualified person in order to avoid an electrical hazard.
- Do not use the appliance if it has been dropped or damaged in any way. In case of damage, take the unit in for examination and/or repair by an authorized service agent
- To reduce the risk of electric shock, do not immerse or expose the motor assembly, plug, or power cord to water or any other liquid.
- Never immerse the control unit and power cord in water or any other liquid for cleaning purposes.
- Only the inner lining of your foot warmer can be washed by hand or machine (30°C/86°F), the outer part should be wiped clean with a damp cloth. Let everything dry completely before storing the foot warmer in a cool, dry place.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains.
- The use of accessory attachments that are not recommended or supplied by the manufacturer may result in injuries, fire, or electric shock.
- A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- Do not let the cord hang over the edge of a table or counter.
- Ensure that the cord is not in a position where it can be pulled inadvertently.
- Do not allow the cord to touch hot surfaces, and do not place it on or near a hot gas or electric burner, or in a heated oven. Do not place the unit on a hot surface.
- Do not operate this appliance near an electrical oven or any heat source.
- This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended use.
- DO NOT carry the unit by the power cord.
- Do not leave this appliance unattended during use. An appliance should never be left unattended when plugged in.
- Ensure that the switch is in the "Off" position after each use. To disconnect, turn the control to the OFF position, and then remove the plug from outlet.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use, or for repairs carried out by unauthorised personnel.
- In the event of technical problems, switch off the appliance and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment, or repair.
- Do not operate under a blanket. Excessive heating can occur and cause fire, electric shock or injuries.
- Do not use folded, do not puncture.
- People with pacemakers should consult their physicians or the manufacturer of the pacemaker before using the foot warmer, as the electronic and magnetic emission from this product can affect the pacemaker's function under certain circumstances.

Controller:

- 0 = OFF
- 1 = low heat
- 2 = medium heat
- 3 = high heat



- Push up the temperature control button on the controller until the desired heat setting is selected. The electric foot warmer will start to heat up after a few minutes. It takes approximately 15 minutes to reach the desired temperature.
- Begin by heating the foot warmer to the highest temperature setting. You can adjust the temperature to the desired level after 15 minutes.
- There is an odour when you first use the foot warmer, which is normal. Although this odour is completely harmless, it's important to air out the foot warmer after your first use.
- The foot warmer's heating function shuts off automatically after 90 minutes. If you wish to reheat the foot heater after 90 minutes, simply set the heat level back to 0 for approximately 5–10 minutes. You can then select the desired heat level again. The foot heater is equipped with an overheating control function.
- Unplug the foot heater when it is not in use.

Cleaning your foot warmer:

- The inner lining of the foot warmer can be washed by hand or machine. Remove the inner cover from the foot warmer and wash it.
- When hand washing, use warm water with mild washing powder or detergent. Soak for 5 minutes and gently wash and rinse thoroughly in clean water. For machine washing, wash as wool at 30°C/86°F.

PLEASE NOTE: that ONLY the inner lining can be washed. The wire is detachable, but do not wash the whole product.

- The outer part must not come into contact with water due to the risk of electric shock.
- Allow product to cool before storage.
- Do not place objects on top of the product during storage.
- Due to a risk of suffocation, the product and its packaging must be kept out of reach of children.
- Always store the foot warmer in a dry place and out of the way of other heat sources.

Drying:


- Air-drying is recommended.
- Do not poke on the wired areas of the foot warmer as this will damage the internal circuit.
- NEVER wring the foot warmer.
- Always ensure the the foot warmer is 100% dry and has returned to its original size before use.

Technical Support

If you require any technical support for your product within the warranty period, please contact us on **support@dmdcollective.co.uk** and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

WEEE



The WEEE symbol  on this product means that this unit should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

IMPORTANT: ADDITIONAL SAFETY INFORMATION

This device is **NOT** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the device by a person responsible for their safety.

Technical Specifications

Product name	DMD Collective Electric Heated Foot Warmer
Supplier code	DMD120
Voltage	Input: 220-240V AC~ 50/60Hz
Power	100W
Size	30cm (W) x 30cm (D) x 24cm (H)
Weight	722g



Ace Supply Co Ltd.,
Suite GA, Marsland House
Marsland Road, Sale M33 3AQ

For Product Support:
E: support@dmdcollective.co.uk
T: +44 (0)161 447 8597

EU Regd. Address: Ace Supply Co (Europe) Ltd.,
25 Herbert Place, Dublin 2, D02 A098
Republic of Ireland

www.dmdcollective.co.uk