 

Power Juicer

Information for use

 
Thank you for purchasing the DMD Power Juicer. This powerful and easy-to-use juicer is designed to extract maximum juice from your fruits and vegetables. This manual will guide you through all the features and functions of your new appliance. We recommend that you keep the instructions for future reference, so that you can remind yourself of the functions of your appliance.

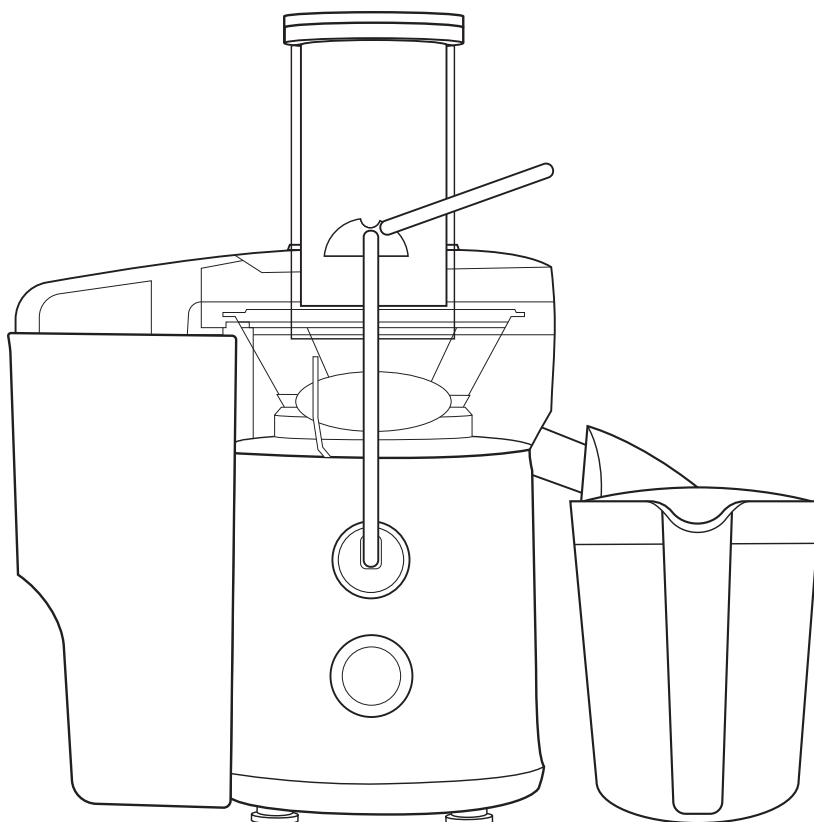

Health and Safety Guidelines

- Always unplug the unit when not in use, before cleaning, or when adding or removing parts. Please read the instructions carefully before using any appliance.
- Always ensure that the voltage on the rating label corresponds to the mains voltage in your home.
- Incorrect operation and improper use can damage the appliance and cause injury to the user.
- The appliance is intended for household use only. Commercial use invalidates the warranty, and the supplier cannot be held responsible for injury or damage caused when using the appliance for any other purpose than that intended.
- Do not let children use this appliance unsupervised.
- Check the power cord and plug regularly for any damage. To prevent an electrical hazard, the manufacturer will need to replace the cord or plug if it is damaged.
- Do not use the appliance if it has been dropped or damaged in any way. If the unit is damaged, take it in for examination and/or repair by an authorized service agent.
- To reduce the risk of electric shock, do not immerse or expose the motor assembly, plug, or power cord to water or any other liquid.
- Never immerse the unit in water or any other liquid for cleaning purposes. Do not reach for an appliance that has fallen into the water. Unplug immediately.
- Remove the plug from the socket by gripping the plug. Do not pull on the cord to disconnect the appliance from the mains.
- Injury, fire, or electric shock could result from the use of accessory attachments that the manufacturer has not approved or supplied.
- A short cord is provided to reduce the hazards resulting from becoming entangled in or tripping over a longer cord.
- Do not let the cord hang over the edge of a table or counter, ensure that the cord is not in a position where it can be pulled inadvertently.
- Do not allow the cord to touch hot surfaces, and do not place it on or near a hot gas or electric burner or in a heated oven. Do not place the unit on a hot surface.
- This appliance is not suitable for outdoor use. Do not use this appliance for anything other than its intended purpose.
- Do NOT carry the unit by the power cord.
- The manufacturer does not accept responsibility for any damage or injury caused by improper or incorrect use or for repairs carried out by unauthorised personnel.
- In the event of technical problems, switch off the appliance and do not attempt to repair it yourself. Return the appliance to an authorised service facility for examination, adjustment, or repair.
- Always insist on the use of original spare parts. Failure to comply with the above-mentioned precautions and instructions will affect the safe operation of this machine.
- We do not recommend using extension cords with this product.
- Disconnect the plug and lid before cleaning or when the appliance is off.
- Never use your fingers, kitchen utensils, or similar tools to push ingredients down the feed tube! Use the accompanying tamper.
- Never stick fingers or other objects in the spout.
- Never touch the moving parts of the appliance until it has come to a complete stop.
- Handle the centrifuge bowl carefully because it contains extremely sharp parts.
- If there is damage to the centrifuge bowl, never use it.
- Do not leave the appliance running nonstop for more than 3 minutes at a time. If the appliance has been running for 3 minutes, allow it to cool down for 7 minutes before you use it again.
- Never put the hot ingredients (above 65 °C) into the machine.

Parts Included

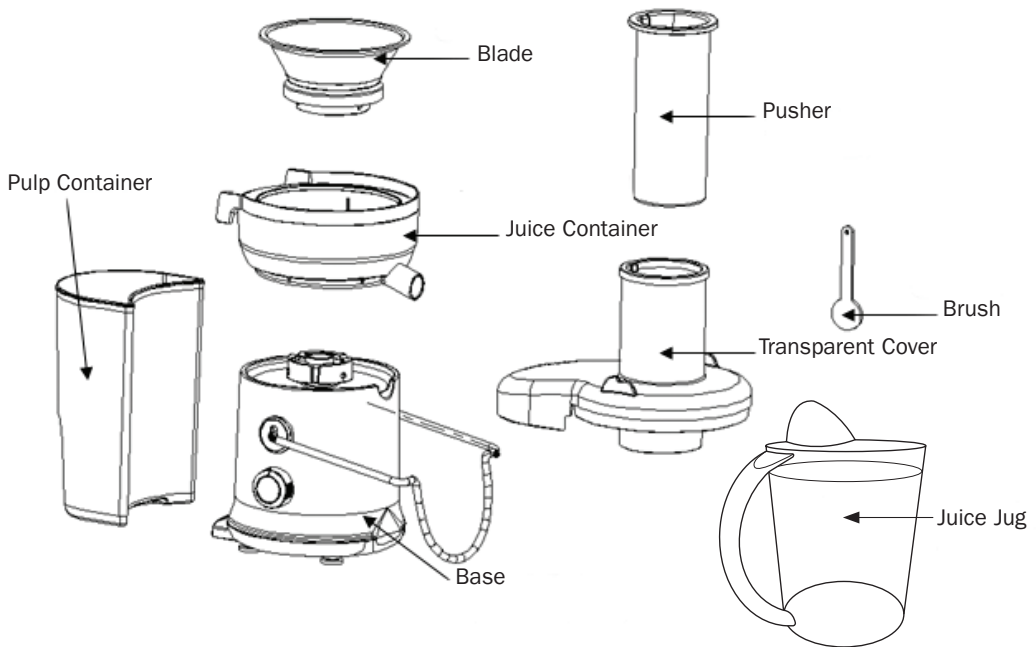

Preparing Ingredients For Juicing

- We suggest cutting the fruits and vegetables to fit the size of the feed inlet. (Peeling is optional for most fruits except citrus fruits where the rind may impart bitterness).
- Apples, tomatoes, carrots etc: Clean and cut it into four pieces.
- Watermelon after cleaning and removing the peel, cut it to the appropriate size for the feed inlet.

PLEASE NOTE: Remove the harder and larger grains. Otherwise, it will cause the filter blade to be damaged and the product to be shocked.

- The smaller the fruits and vegetables, the better the juice yield.

 
Operating The Power Juicer

This product's power switch is a rotary knob switch. This can be set to:


OFF LOW SPEED HIGH SPEED




1. Clean the parts that can touch the food, such as the juice jug, pulp container, blade, pusher, and transparent cover.
2. Place the juicer on a flat, stable surface.
3. Let the power switch be in the "OFF" position, then assemble the machine (Figs 1-6) and plug it in.

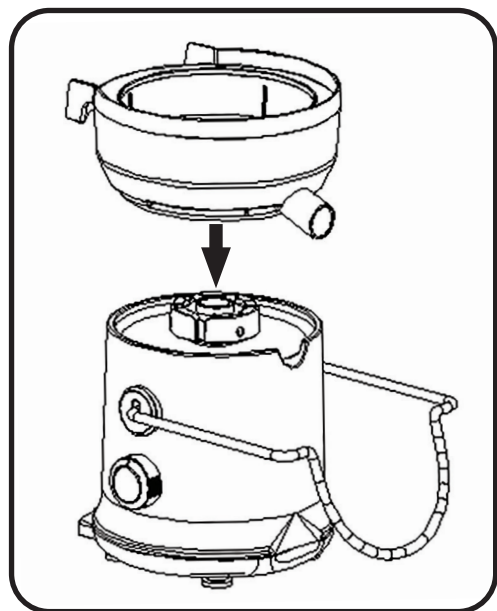

 
- 1** Assemble the juicer according to the diagram.

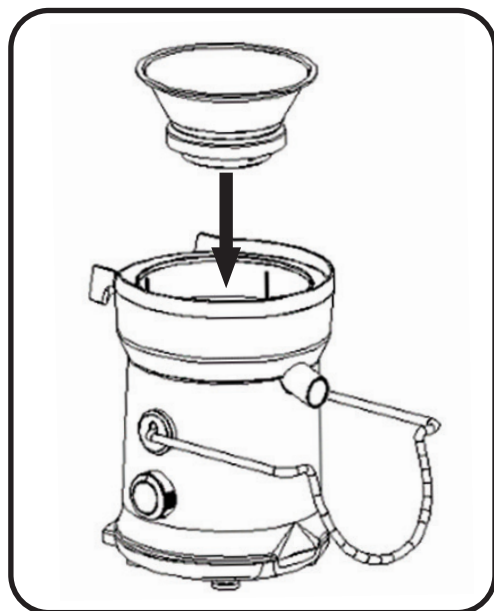


- 2** Lock the blade onto the base.

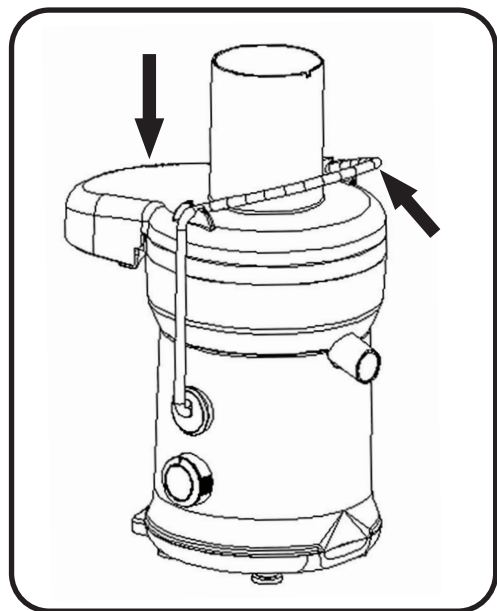 

 - 3** Insert the transparent cover and then lock the pull rod.

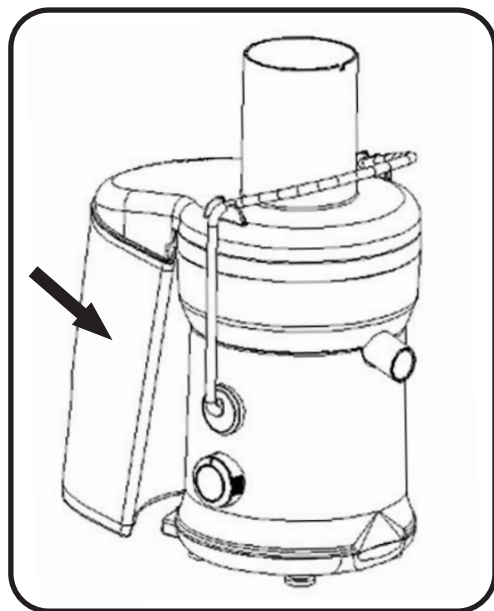


- 4** Insert the pulp container.

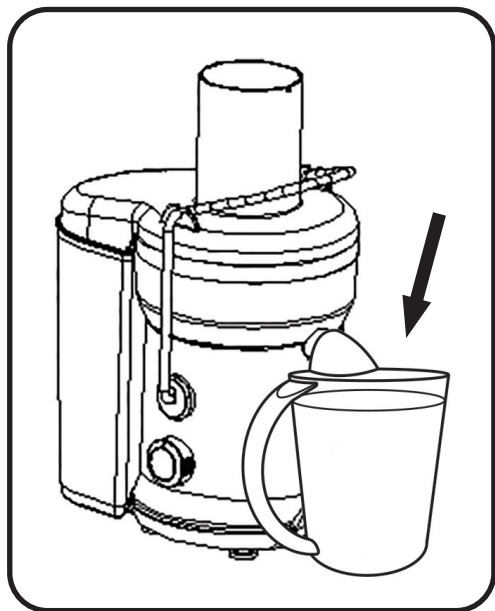 


5

 Insert the juice jug.

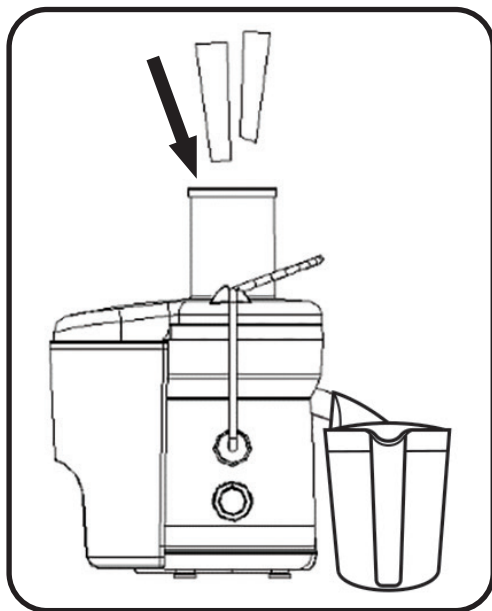


6

 Choose a suitable speed by turning the rotary switch and add fruit or vegetables.

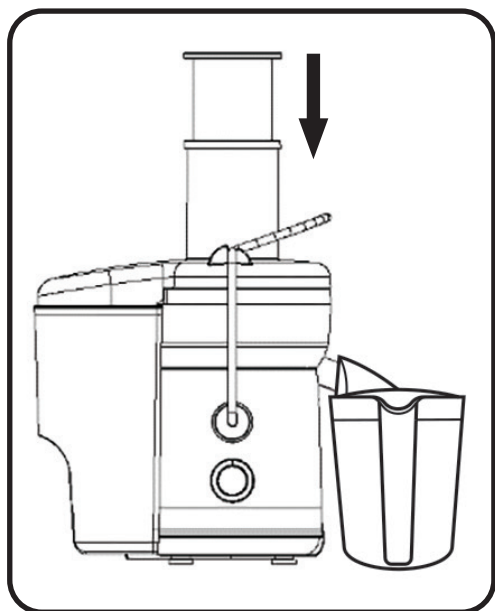

7

 Turn on the juicer and slowly feed the ingredients into the feeding tube. Use the pusher to insert the fruit, but don't push it too fast.

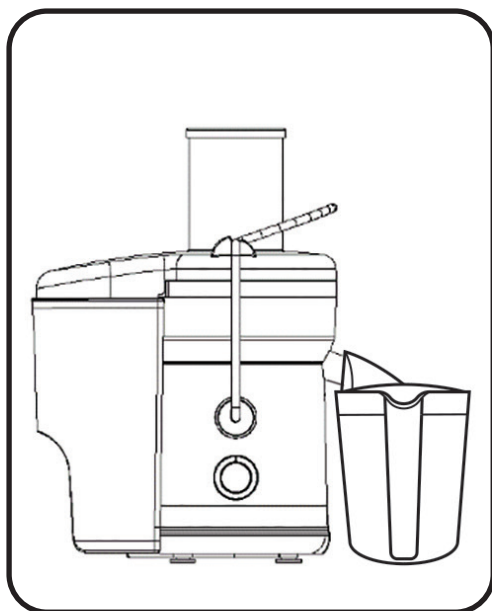

8

After juicing, take out the pusher, don't turn off the knob until the juice has stopped coming out.

Cleaning:

- Remove the plug from the wall socket and allow the apparatus to cool down before cleaning.
- Disassemble the juicer and clean all parts.
- The best way to clean the motor section is with a slightly dampened cloth and, if necessary, a little detergent. Avoid immersing the motor section in any liquid!
- You can wash the centrifuge bowl, fruit pulp holder, base, and all other detachable parts by hand or in a dishwasher.
- Be careful not to touch the sharp parts at the bottom of the centrifuge bowl.
- Do not use any kind of strong or abrasive cleaning agent on the appliance or its accessories. Avoid using scouring sponges or similar materials for cleaning, as they could potentially damage the surface.
- Before reassembling the appliance after cleaning, allow all parts to dry completely.

Storage:


- Ensure the appliance is clean and dry before storing.
- The appliance contains sharp parts; keep it out of the reach of children.

Technical Support

If you require any technical support for your product within the warranty period, please contact us on **support@dmdcollective.co.uk** and provide the product name and supplier code (see Technical Specifications) along with the technical query and proof of purchase.

WEEE



The WEEE symbol  on this product means that this unit should be ethically dismantled or recycled to minimise environmental impact. Please check with your local authority for more information.

IMPORTANT: ADDITIONAL SAFETY INFORMATION

This device is **NOT** intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they are supervised or have been given instruction concerning use of the device by a person responsible for their safety.

Technical Specifications

Product Name:	Power Juicer
Supplier Code:	DMD127
Voltage:	220-240V~50/60Hz
Size:	195cm (L) x 150cm (W) x 42cm (D)
Capacity:	1L
Wattage:	600W
Automatic Shut Off:	No
Material:	Plastic
Size:	25 x 16 x 33CM
2 Speed Control:	12000-14000 RPM
Dishwasher Safe:	YES



Ace Supply Co Ltd.,
Suite GA, Marsland House
Marsland Road, Sale M33 3AQ

For Product Support:
E: support@dmdcollective.co.uk
T: +44 (0)161 447 8597

EU Regd. Address: Ace Supply Co (Europe) Ltd.,
25 Herbert Place, Dublin 2, D02 A098
Republic of Ireland

www.dmdcollective.co.uk